




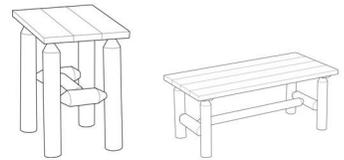

CF1222/PT1623*/PT2143*

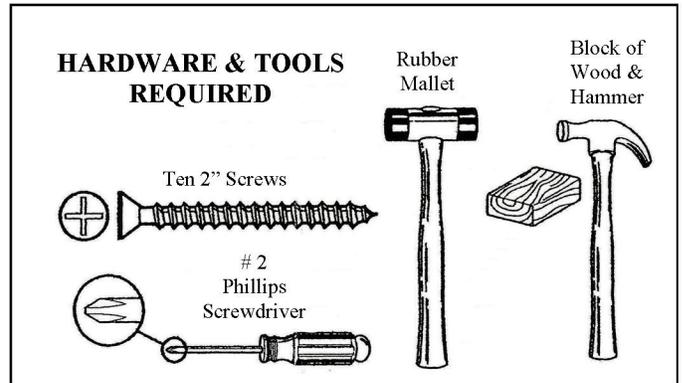

Please check contents before assembly. If any items are missing or damaged, do not take the unit back to the store. Call 1-800-427-5136 for customer service and we will save you time by correcting any problems directly for you. NOTE: Cracks or Checks in logs are part of the natural beauty of cedar logs and should not be considered defects.



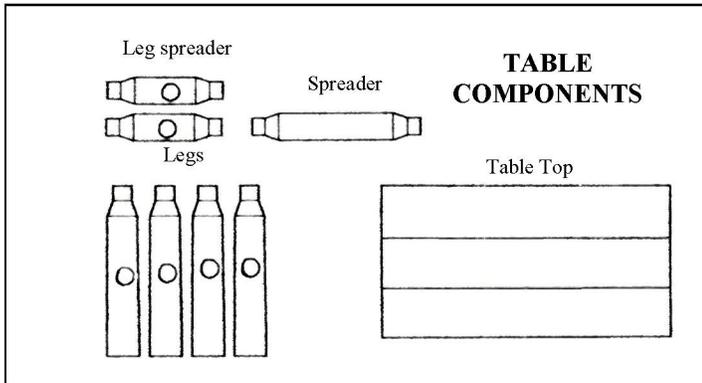


STEP 1 To assemble leg assemblies use a rubber mallet (or a block of wood between a hammer and the unit) to drive doweled ends into holes as shown in figure 1.

*leg assemblies for the PT1623 & PT2143 will not angle as shown in picture, they will be perpendicular to the table top.


STEP 2 Place the table top on a clean flat surface and put doweled ends of leg assemblies into holes in table top as shown in figure 2.

STEP 3 Secure doweled joints in place with screws perpendicular to the doweled ends as shown in figure 3. Attach with screws on both ends, in areas indicated by arrows.

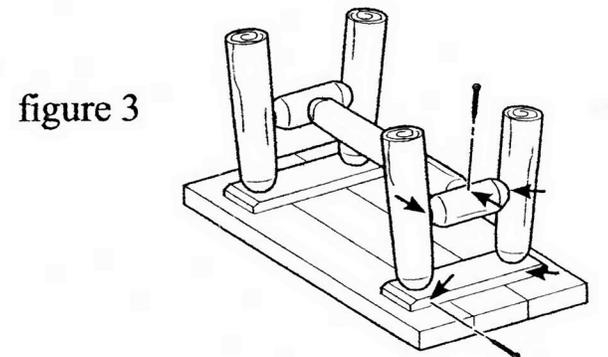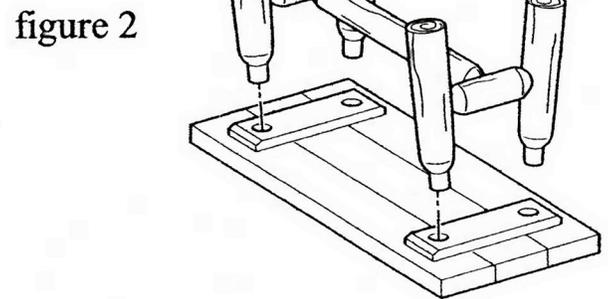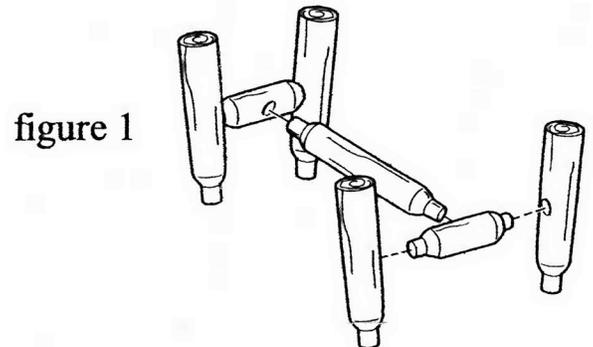

Your table is now assembled and ready for finish or immediate use.

If you have hardware left over after completing your unit, it most likely has been assembled incorrectly, and may not be safe to use. Please call Customer Service at 800-427-5136 for assistance.

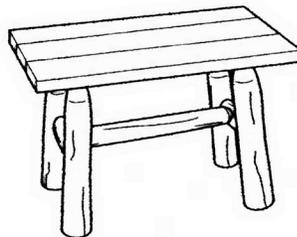

Check all joints for tightness before and during each usage season.