




CFU129 TETE-A-TETE

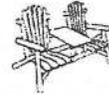

Please check contents **before** assembly. If any items are missing or damaged, **do not take the unit back to the store.** Call 1-800-427-5136 for customer service and we will save you time by correcting any problems directly for you.

TETE-A-TETE COMPONENTS

NOTE: Cracks or Checks in logs are part of the natural beauty of cedar logs and should not be considered defects.

Preassembled Seat Backs

Table Top

Preassembled Swing Seat

2 Front Table Supports 9" Long

2 Leg Braces

1 Left Front Leg 26" Long

1 Right Front Leg 26" Long

2 Back Legs 26" Long

2 Chair Arms

TETE-A-TETE HARDWARE
(Shown smaller than actual size)

Twenty-Two Screws

- NOTE:**
- Read all instructions before starting.
 - To start hex washer head screws, hammer into wood about 1/2" then use wrench to tighten.
 - Do not completely tighten any screws until the unit is fully assembled and setting on a level surface.
 - Use a rubber mallet (or a block of wood between the hammer and the unit) to drive doweled ends into holes as far as possible.

TOOLS REQUIRED

Rubber Mallet

Block of Wood & Hammer

7/16" Socket

#2 Phillips Screwdriver

STEP 1 Assemble front table supports into table top and back table support into seat backs as shown in figure 1.

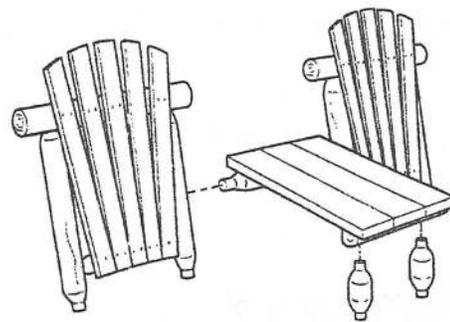


figure 1

STEP 2 Lay assembled seat on ground. Insert dowel end of assembled seat backs into 1-1/4" holes on the back seat rail, adjusting uprights in or out as needed to align properly. Align front table supports into holes on front of seat rail. Do not tap on seat back with hammer. To keep the seat rail from splitting, lay the back on the ground and drive the seat on by hitting on the bottom of the seat assembly.

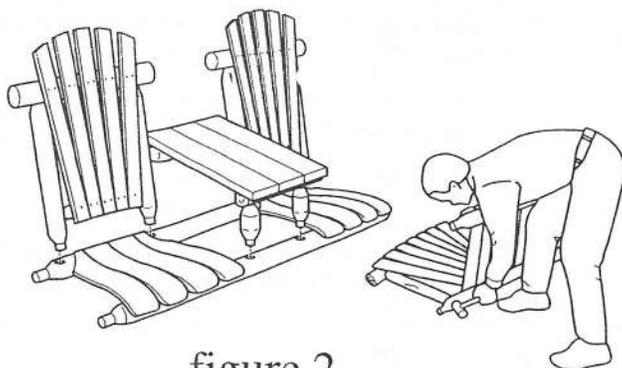


figure 2

STEP 3 Make a right leg set and a left leg set by inserting dowel end of back leg into angled hole of front leg. The drilled holes on each Leg should face the same direction as shown in figure 3.

Put arms onto legs by inserting dowel end of front legs into holes in arms. Drive ARM onto leg assembly as far as possible.

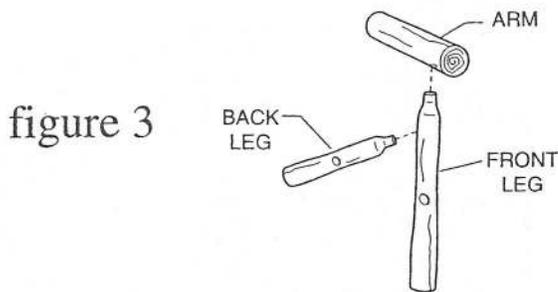


figure 3

STEP 4

Set chair in upright position on a level surface and when legs are in proper position, bring ARM in against UPRIGHT. Tighten the preinstalled lag screws into the pilot hole in the arm with a 7/16" wrench or socket. Secure dowel joint in place with screw perpendicular to the doweled end as shown in figure 4. Repeat procedure for other side.

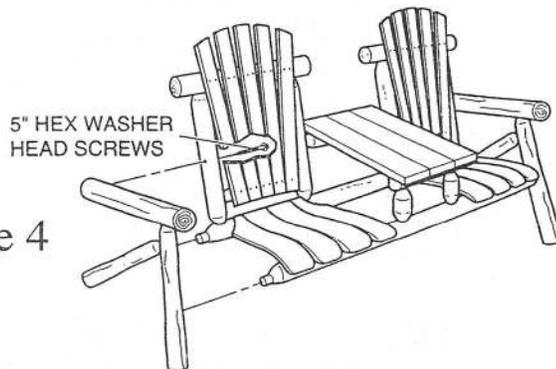


figure 4

STEP 5 Screw a brace on each side of front leg to seat bottom as shown in figure 5. Secure all dowel joints in place that you have assembled, with screws perpendicular to the doweled end as shown in figure 5.

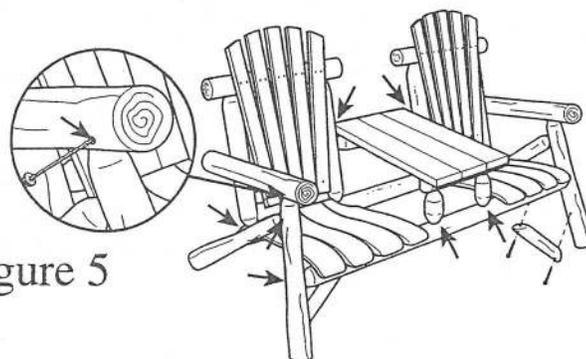


figure 5

Your seat is now assembled and ready for finish or immediate use.



Factory: 1 Lakeland Place, P.O. Box 350,
Edmore, Michigan 48829
Phone: 800-427-5136 • Fax: (989) 427-5824

